





## Type overview


### Double-row

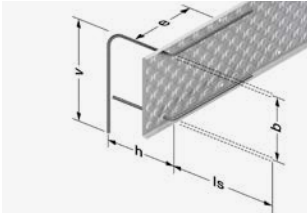


FERBOX® B01

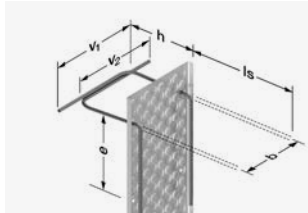


FERBOX® B02

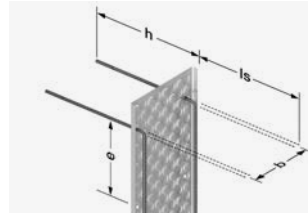


FERBOX® B03

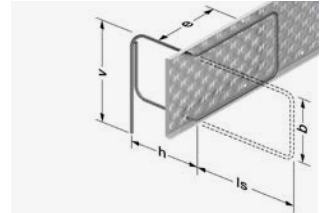


FERBOX® B04/B04S

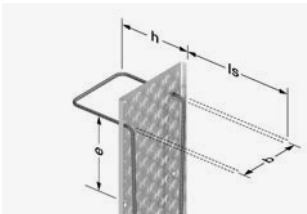


FERBOX® B05

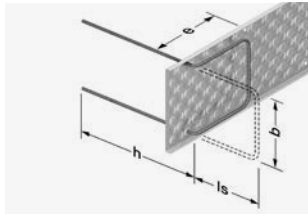


FERBOX® B06/B06S

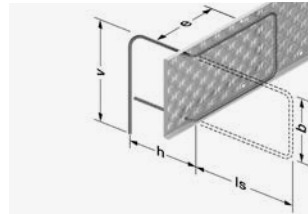

FERBOX® B07/B07S

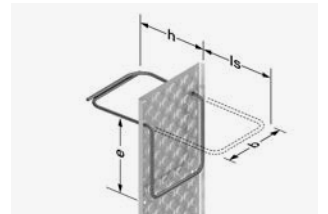


FERBOX® B08/B08S

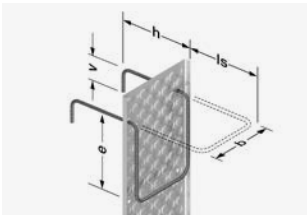


FERBOX® B09/B09S


### Single-row

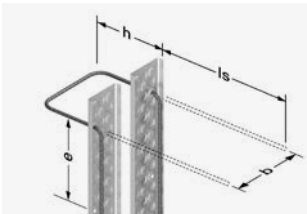


FERBOX® EE

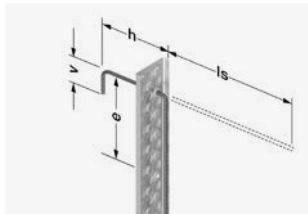

FERBOX® E01

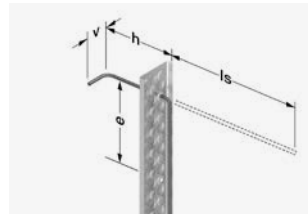


FERBOX® E02

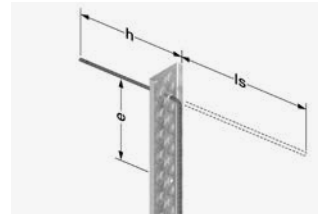

FERBOX® E03

### Type designation

FERBOX® B07 160 10 150 b135 h170 ls150 v250 L1200

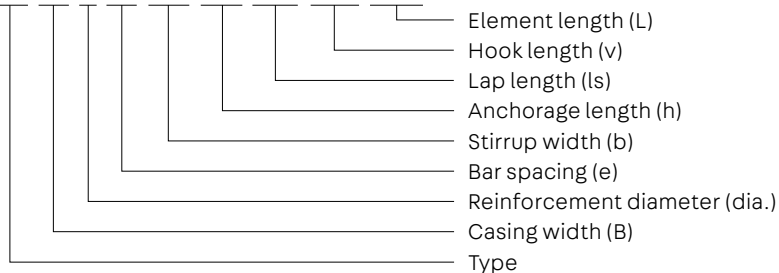

Ascertaining the stirrup width  $b$  for a double-row FERBOX®

$b = \text{casing width } B - 25 \text{ mm}$

Hook length  $v$ :  
 For FERBOX® B02 there are two different hook lengths  $v_1$  and  $v_2$ . Please specify both values.