


AGW

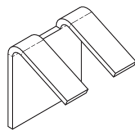

The AGW compensating bracket is used to compensate for unevenness so that the JVAeco+ brickwork support bracket is force-fitted and horizontal against the shell. To do this, it is pushed over the welded-on pressure plate on the underside of the bracket at the pressure point. Assembly is simple and does not require additional tools. The AGW compensating bracket is made of Lean Duplex stainless steel and is available in material from 2 to 6 mm thick.

Artikel	Typ	W
AGW2	JORDAHL Ausgleichswinkel	0.023 kg
AGW3	JORDAHL Ausgleichswinkel	0.034 kg
AGW4	JORDAHL Ausgleichswinkel	0.058 kg
AGW5	JORDAHL Ausgleichswinkel	0.073 kg
AGW6	JORDAHL Ausgleichswinkel	0.087 kg

