


# Cartridge installation units with protective floor covering frame made of stainless steel, round

Assembly instruction





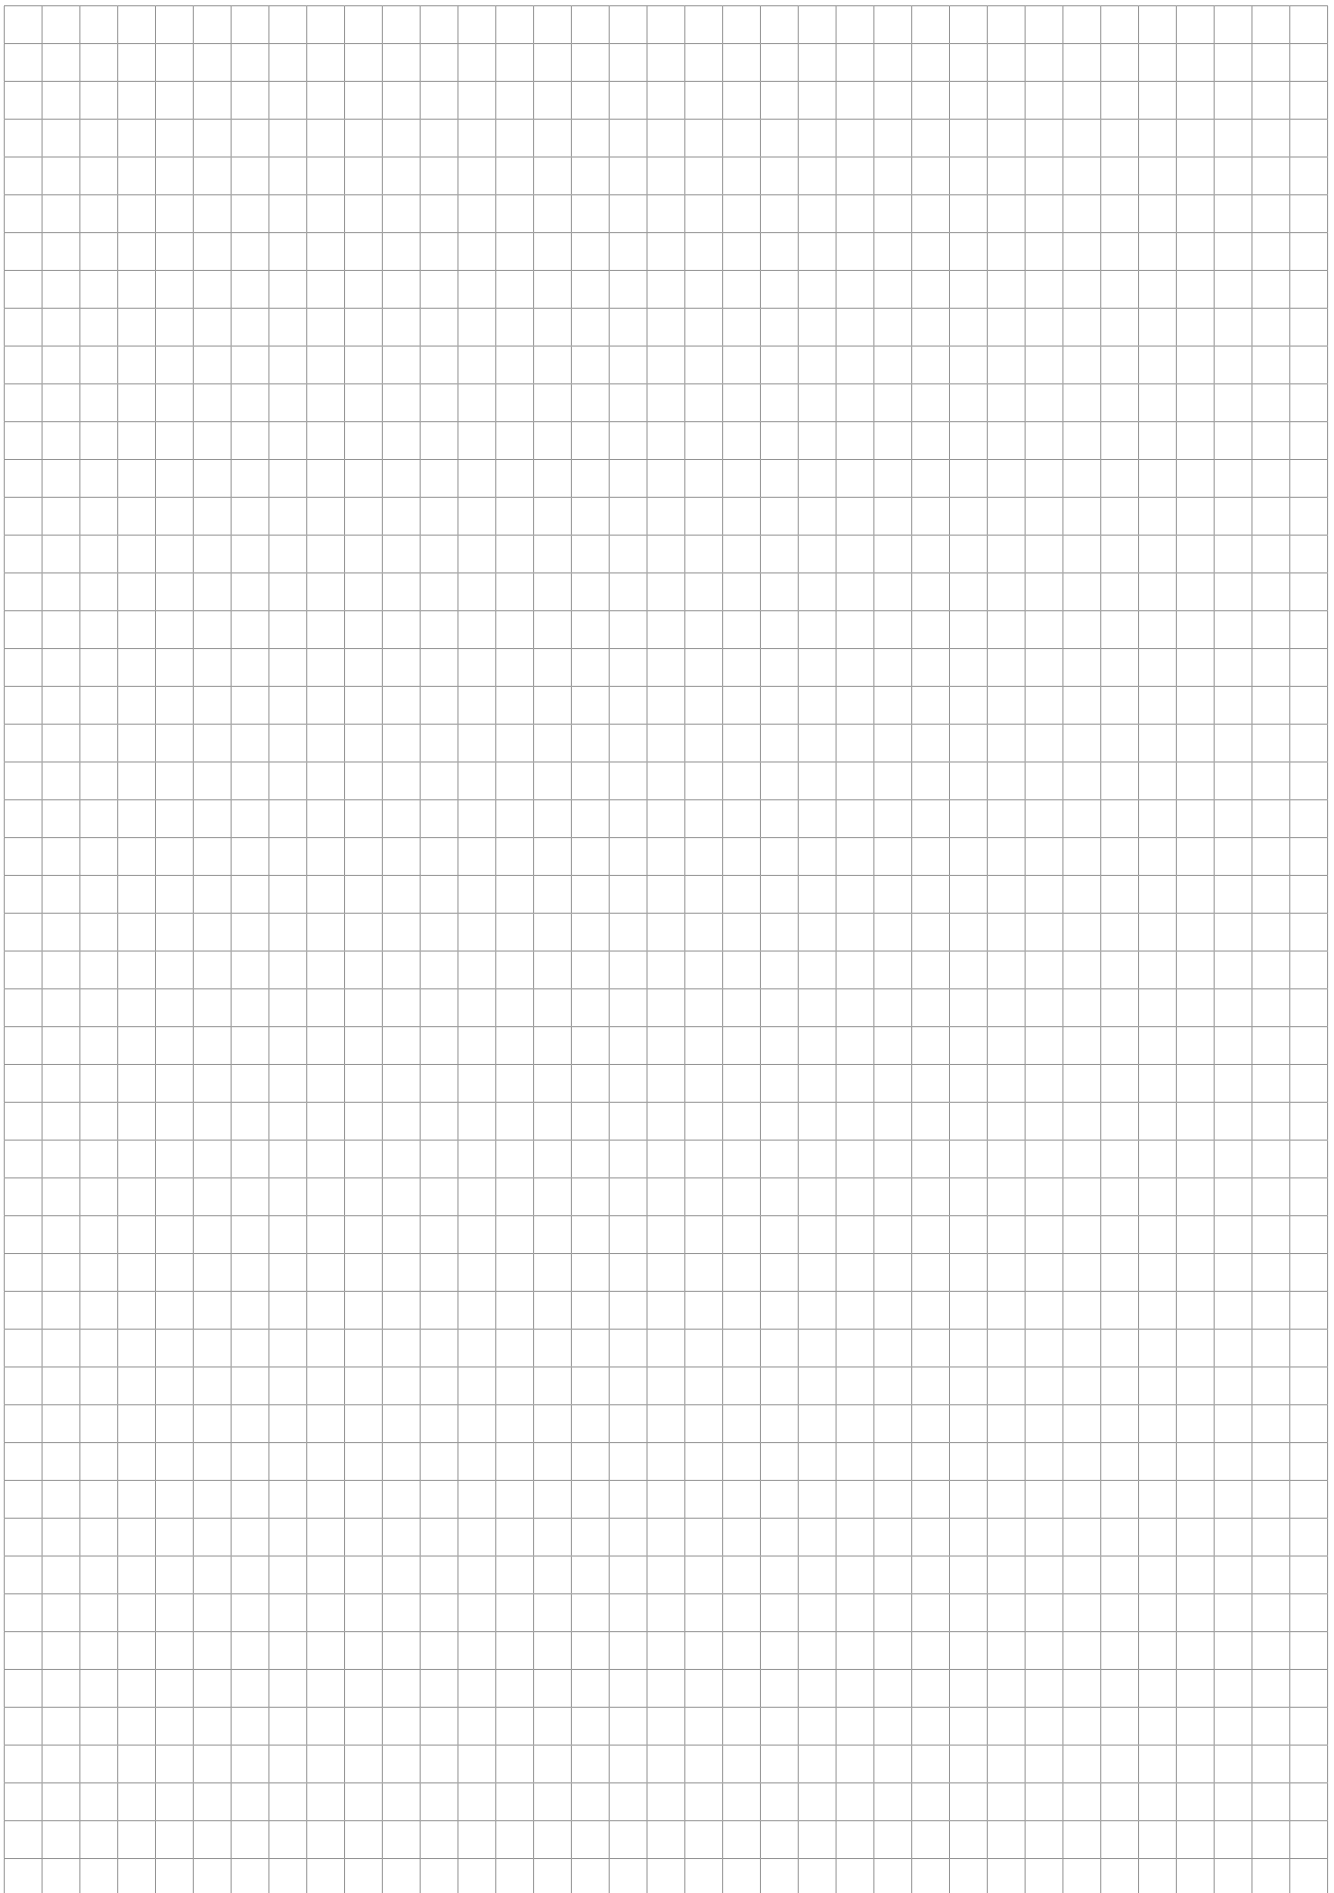


Cartridge installation units with a protective floor covering frame made out of stainless steel, round, with an outside diameter = 330 mm, for hollow space or false floors, with a clamping range from 40 to 80 mm. Usable for floor coverings with a thickness of 12 mm.




#### 1 Cartridge installation unit

Insert the cartridge installation unit (UEKDD R E) which is usable for up to three mounting boxes in the floor opening.

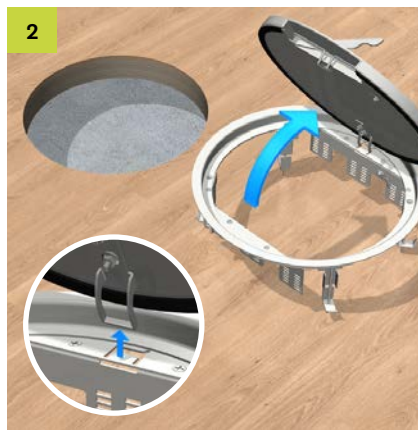

#### 2 Opening lever

Open the opening lever behind the cable outlet. Lift the cover out over the rear and the hinge out over.

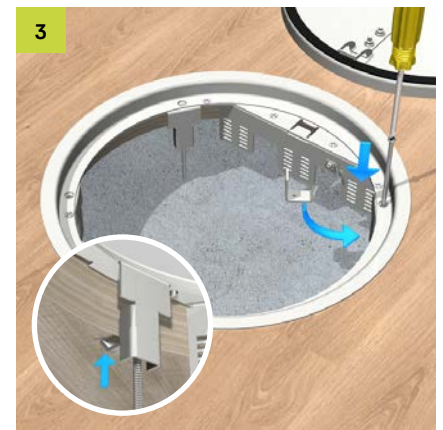


#### 3 Claw fastener

Fit the provided claw fastener with the appropriate screws in the frame and tighten them.




#### 4 Rubber seal/mounting box

For impact noise decoupling, the rubber seal is already glued in place. Snap in the mounting box(es) as deeply as possible. In case of using a connector plug with H = 35 mm, the necessary installation depth is 85 mm.

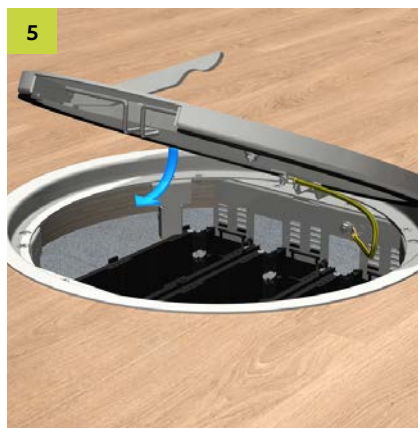

#### 5 Cover

Insert the cover in the frame and create a grounding connection between frame and cover. Open the cable outlet through the opening lever and swing the cable outlet axis around. Observe the potential equalization.

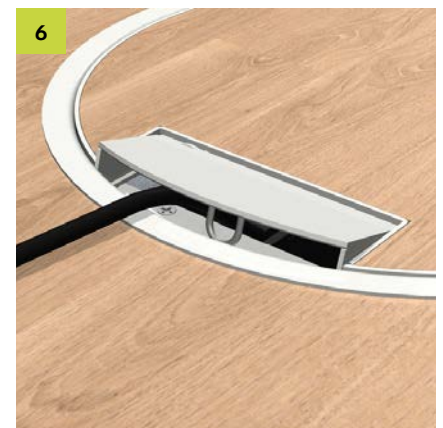

#### 6 Cable outlet

Lead the cables through the cable outlet.

Errors and technical modification subject to change. Reproduction as well as electronic duplication only with our written permission. With appearance of this print all preceding documents lose their validity.

© PohlCon | PC-LIT-MA-UEKDD-R-EN | 07-2018 | 3. v. | 04-2021

**PohlCon Vertriebs GmbH**

Nobelstr. 51  
12057 Berlin

T +49 30 68 283 - 04  
F +49 30 68 283 - 383

[www.pohlcon.com](http://www.pohlcon.com)