


Cartridge installation units UEKDD R E

Assembly instruction






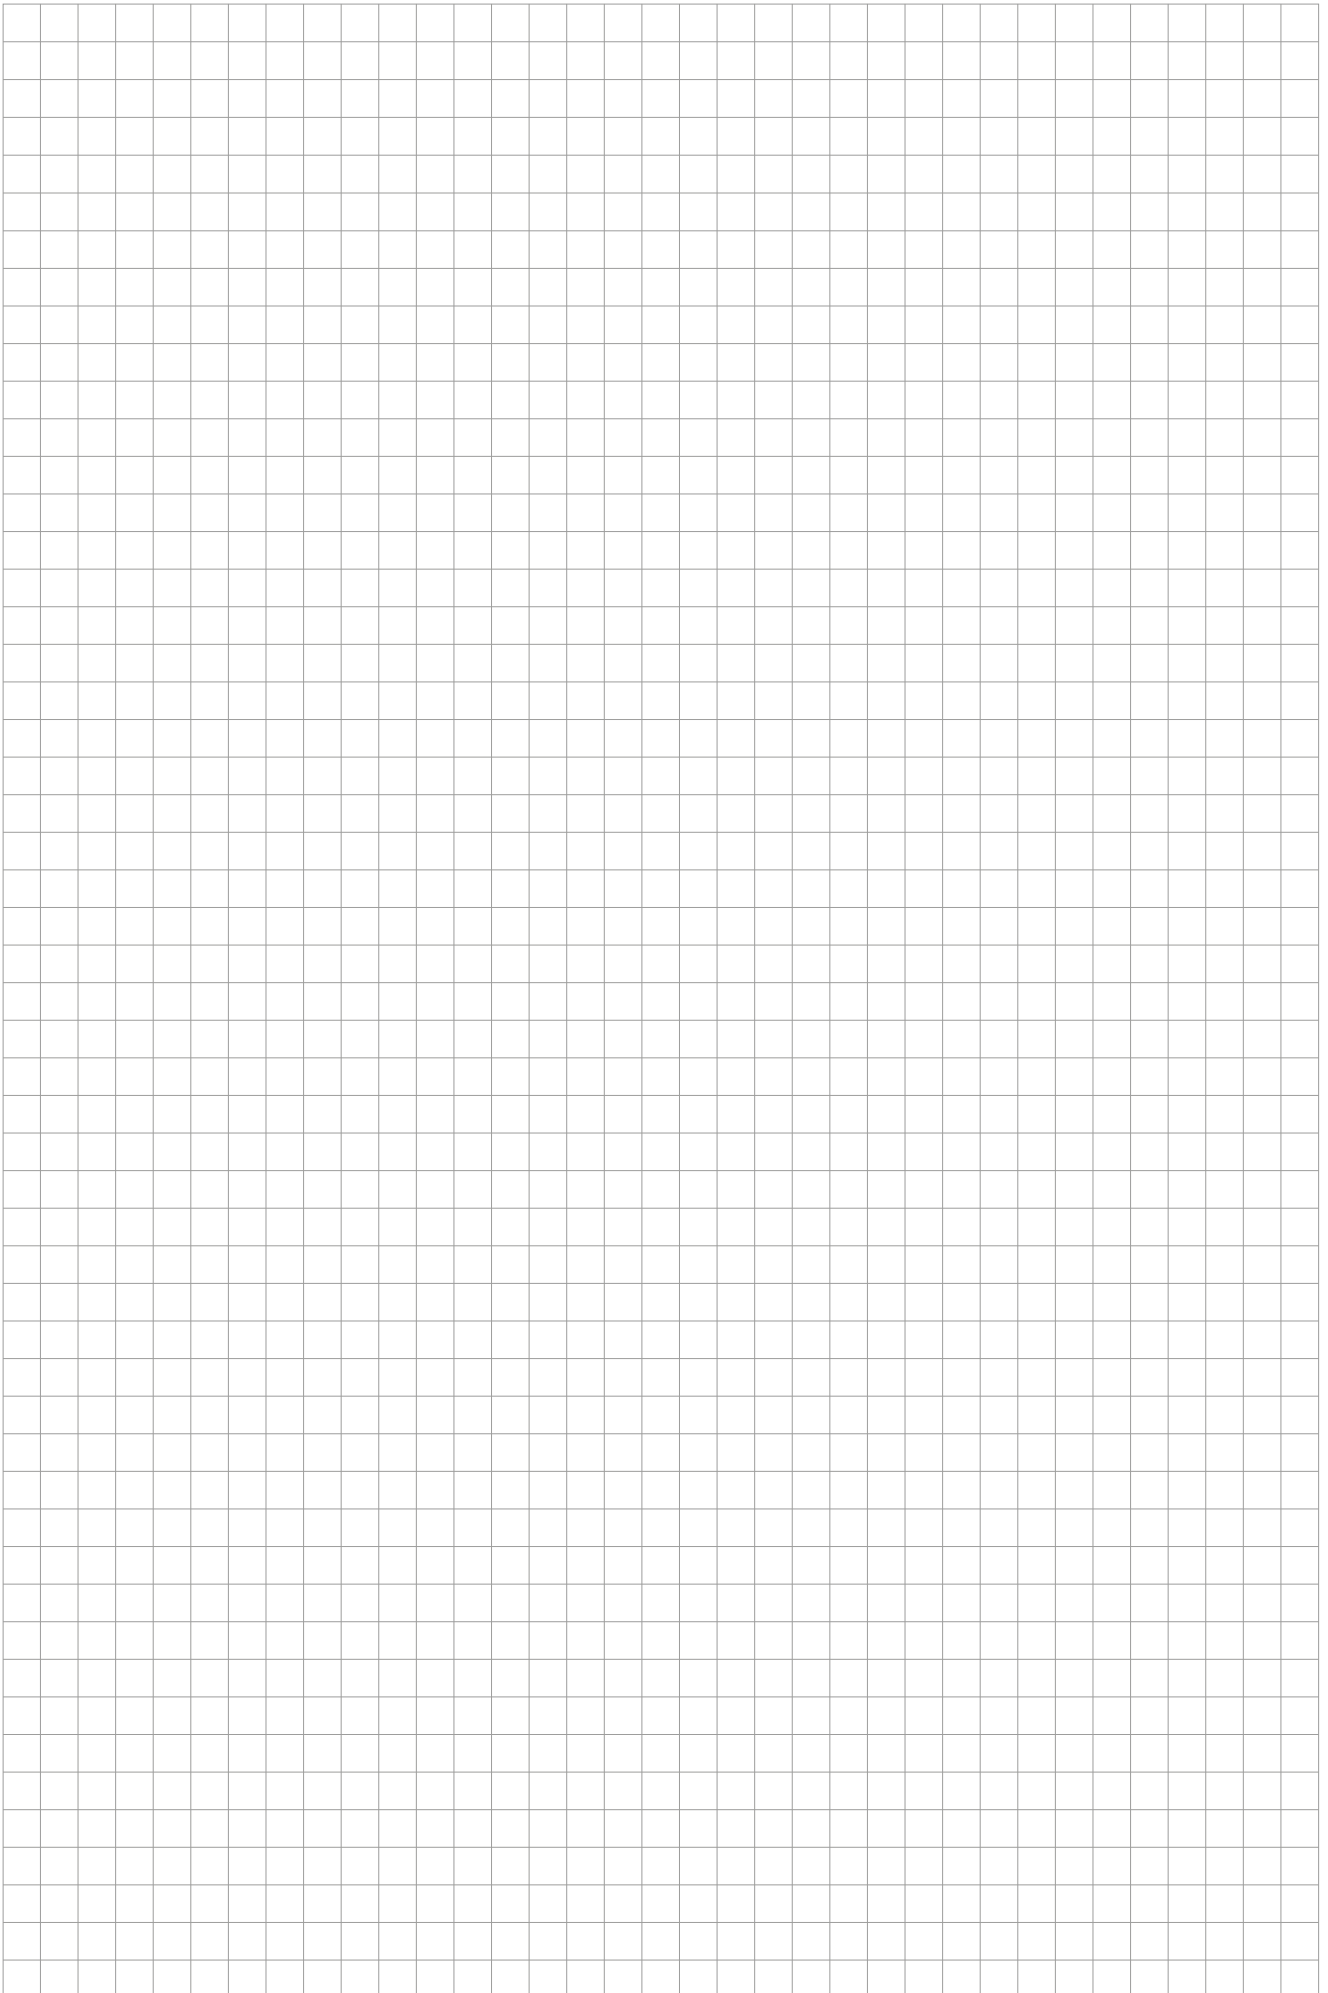

Cartridge installation units with a protective floor covering frame made out of stainless steel, round, with an outside diameter = 330 mm, for hollow space or false floors, with a clamping range from 40 to 80 mm. Usable for floor coverings with a thickness of 12 mm.



1 Cartridge installation unit
 Insert the cartridge installation unit (UEKDD R E) which is usable for up to three mounting boxes in the floor opening.

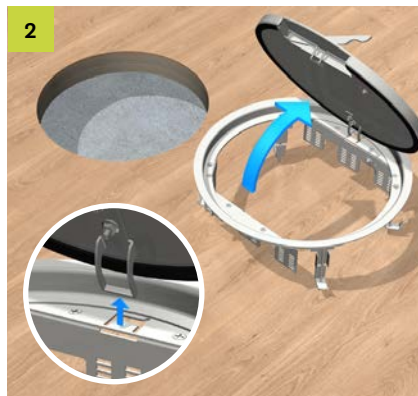


2 Opening lever
 Open the opening lever behind the cable outlet. Lift the cover out over the rear and the hinge out over.



3 Claw fastener
 Fit the provided claw fastener with the appropriate screws in the frame and tighten them.



4 Rubber seal/mounting box
 For impact noise decoupling, the rubber seal is already glued in place. Snap in the mounting box(es) as deeply as possible. In case of using a connector plug with H = 35 mm, the necessary installation depth is 85 mm.

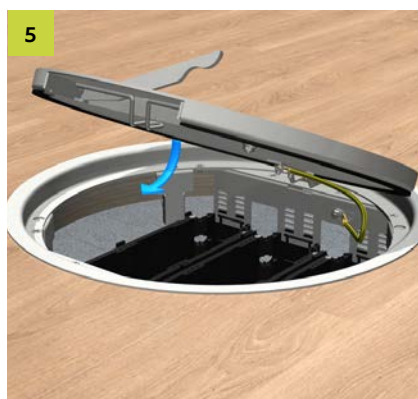

5 Cover
 Insert the cover in the frame and create a grounding connection between frame and cover. Open the cable outlet through the opening lever and swing the cable outlet axis around. Observe the potential equalization.



6 Cable outlet
 Lead the cables through the cable outlet.

All rights reserved. Reprinting and any electronic reproduction only authorised with our written permission. Errors and technical changes reserved. No liability can be accepted by the publisher on any legal basis whatsoever. This publication supersedes all previous versions of the document, thereby rendering them invalid.

© PohlCon | PC-LIT-MA-UEKDD-R-EN | 07-2018 | 4. v. | 10-2023

PohlCon GmbH

Nobelstr. 51
12057 Berlin
Germany

T +49 30 68283-04
F +49 30 68283-383

www.pohlcon.com